

Secure Seal SSD

Adjustable Length Installation Instructions

Note: For Single wall (SS) - follow steps 1 to 8



The adjustable length will be installed to fill the gap between two parts:

1. Downstream part
2. Upstream part



Components / Parts required:

1. Standard component
2. Adjustable length - inner wall
3. Adjustable length - outer wall
4. Inner collar – multi-tooth clamp
5. Outer collar – draw band
6. Clip retainer
7. Silicone Lube
8. Viton caulking



STEP 1:

Add silicone lube on female ends everywhere a male end with O-Ring goes in. In this case, you must add silicone lube on the female end of the adjustable inner wall and on the female end of the downstream part.

Note: You only require a thin film application of the silicone lube.




STEP 2: Insert the adjustable length inner wall inside the standard part female end.

STEP 3: Install the clip retainers on the standard part to keep the clip closed because there is no rolled edge on the adjustable for the clip to grab on. This will prevent the hook of the clip from hanging down. Be sure to install the retainer the correct way.



CORRECT

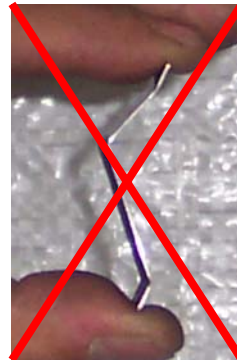

WRONG



STEP 4:

Insert the sub assembly of step 2 in the gap and clip the standard part to the downstream part. If the sub assembly is too long, the adjustable inner wall can be cut

STEP 5:

Move up the adjustable inner wall until the female end is completely over the male end of the upstream part



STEP 6: This is a critical step to allow thermal expansion. You must draw a line on the adjustable length inner wall that is 1/4" higher than the edge of the standard part female end. Then, slide down the adjustable inner wall until the line is flush with the edge. By doing this, there will be no stress applied on the caulking joint.



After step 6, you will have 1/4" gap for thermal expansion at this location



STEP 7: Apply a 1/8" to 1/4" bead (may vary) of Viton caulking to fill the gap between the adjustable length inner wall and the female end of the standard part.




STEP 8: Loosen the inner collar (multi-tooth clamp) and slide it down over the standard part female end. Make sure all the teeth are over the edge. Tighten the inner collar.



Start the measurement from top of bracket

STEP 9: Measure the distance between the rolled edge of the upstream part and the upper bead of the standard part. Transpose this distance to the adjustable outer wall, measure from the upper edge of the bracket to the bottom edge. You may cut the bottom end as needed.

STEP 10: Wrap around the adjustable length outer wall and insert the upper end inside the outer wall the upstream part. Make sure the screw is inside the bracket. Do not tighten the screw at this time or you will have difficulty doing the next step.

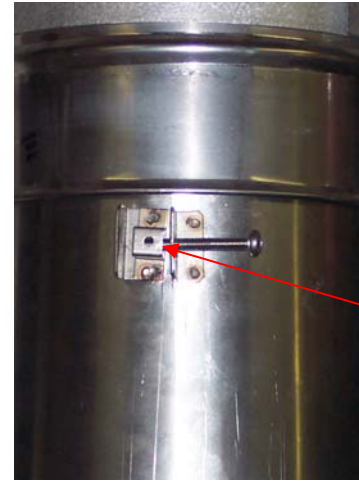

The tip of the screw needs to be inside the bracket

STEP 11: Install the outer collar over the adjustable outer wall. Place it near the bead of the standard part. Tighten the collar.



STEP 12: Tighten the screw until the adjustable outer wall mate correctly with the inside of the outer wall upstream part.

You are done!